


FKL Single Seal Assembly
Models: ALL

P.O. Box 620065, MIDDLETON, WI 53562
TEL: (800)841-5001 FAX: (608)831-8467
www.fristam.com / fristam@fristampumps.com

DWG # 1265000407 REV A
CARD PART # 1050000222

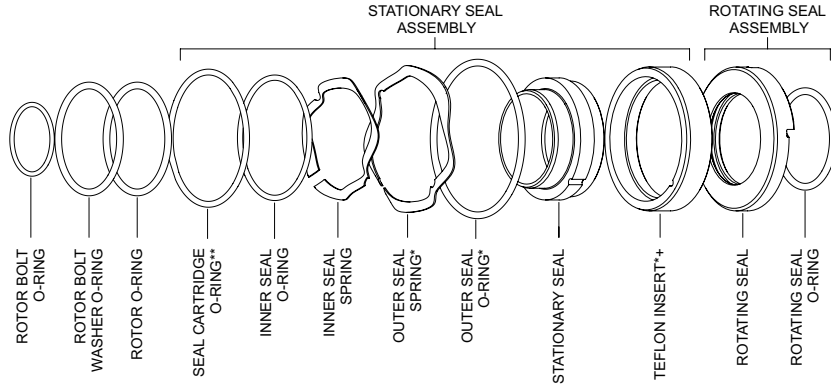


* MODELS FKL 25-580 ONLY
** MODELS FKL 205-580 ONLY
+ NOT SUPPLIED IN WEAR PARTS KIT

DWG # 1265000551 REV -

FKL Double Seal Assembly
Models: 15-580

P.O. Box 620065, MIDDLETON, WI 53562
TEL: (800)841-5001 FAX: (608)831-8467
www.fristam.com / fristam@fristampumps.com

DWG # 1265000406 REV A
CARD PART # 1050000221

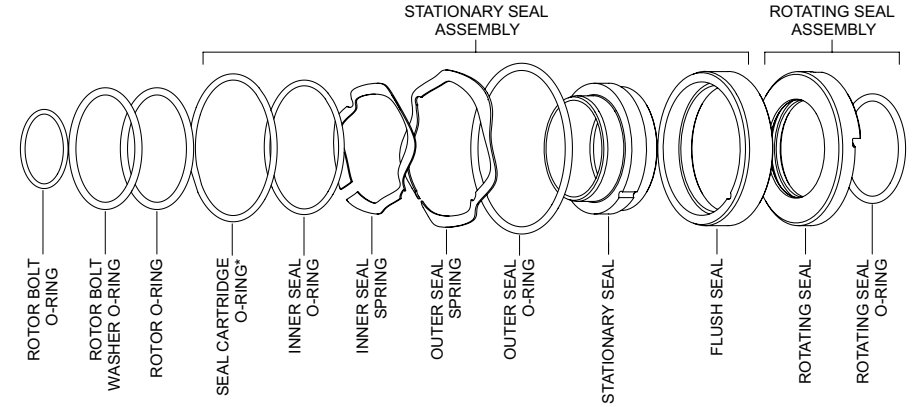


* MODELS FKL 205-400 ONLY

DWG # 1265000550 REV -

FKL Double Seal Assembly
Models: 600

P.O. Box 620065, MIDDLETON, WI 53562
TEL: (800)841-5001 FAX: (608)831-8467
www.fristam.com / fristam@fristampumps.com

DWG # 1265000680 REV -
CARD PART # 1050000274

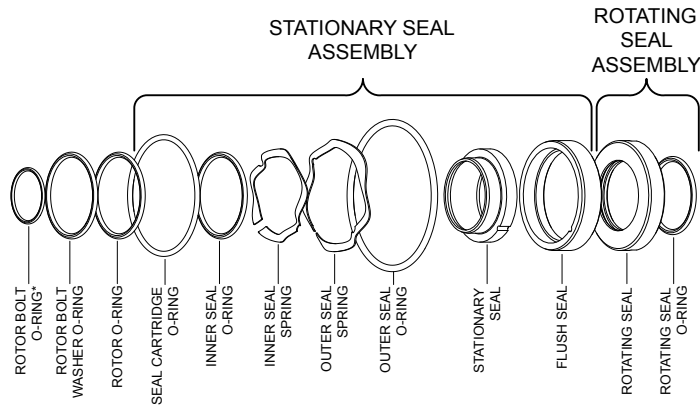

*NOT NEEDED IN PRE-AUGUST 2015 PUMPS

DWG # 1265000681 REV -